

Electret Condenser Microphone

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Electret Condenser Microphone is a great replacement for a lost or damaged microphone. Its omnidirectional pickup makes it ideal for lecture halls, meetings, interviews, or home recording. You can even use its On/Off switch for remote-control recording.

Its features include:

100–10,000 Hz Frequency Response, High Impedance — offers faithful sound pickup.

Y-Connector with $\frac{1}{8}$ -in (3.5 mm) Audio Plug and $\frac{3}{32}$ -in (2.5 mm) Remote-Control Plug — fits most jack inputs.

Slip-On Desk Stand — lets you place the microphone on a desk or other surface.

Foam Windscreen — reduces wind noise and breath pops.

INSTALLING THE BATTERY

Your microphone requires one AAA battery (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Caution: Use only a fresh battery of the required size and recommended type.

Follow these steps to install the battery.

1. Unscrew the microphone's base and remove it.
2. Place the battery in the compartment with the positive (+) end pointing up.
3. Replace the microphone's base and screw into place.

Replace the battery every six months.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the microphone for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

USING THE ON/OFF SWITCH

To use the microphone's On/Off switch as a remote control, plug the microphone into a recorder. Set the recorder to Play/Record. The microphone's On/Off switch controls the cassette tape's movement.

USING THE DESK STAND

To prevent the microphone from rolling off a desk or other surface, slip the desk stand onto the microphone. Move the stand up or down the microphone until you reach the appropriate angle for stability.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99